## NightSearcher EXPLORER CX1000 - User manual






Supplied with Type C USB charging cable and wrist strap

## Operation:

Please note: Unscrew the tail cap and remove the battery seal, before operating the flashlight.

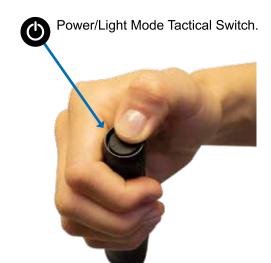

Press quickly to cycle through the light modes:

Medium | High 4hrs

If the light remains in a single mode more than 3 seconds and you press the tail switch the light will turn off.











## Battery charging indicator:

Red light while charging

Green light when charged

Recharge is approximately 5 hours.



**NightSearcher Limited** Unit 4 Applied House, Fitzherbert Spur, Farlington, Portsmouth, Hampshire, PO6 1TT, UK

T: +44 (0)23 9238 9774 E: sales@nightsearcher.co.uk W: nightsearcher.co.uk

All NightSearcher products have a 3 year standard warranty on all manufacturing defects and a 1 year warranty on all rechargeable batteries from the date of purchase.

For extended 5 year warranty please visit https://nightsearcher.co.uk/en/extended-warranty.html proof of purchase is required













Product weight	149g
Product size	133x30mm Ø
NS Part No.	NSEXPLORER-CX1000